


# Striker Cam Adjustment Chart

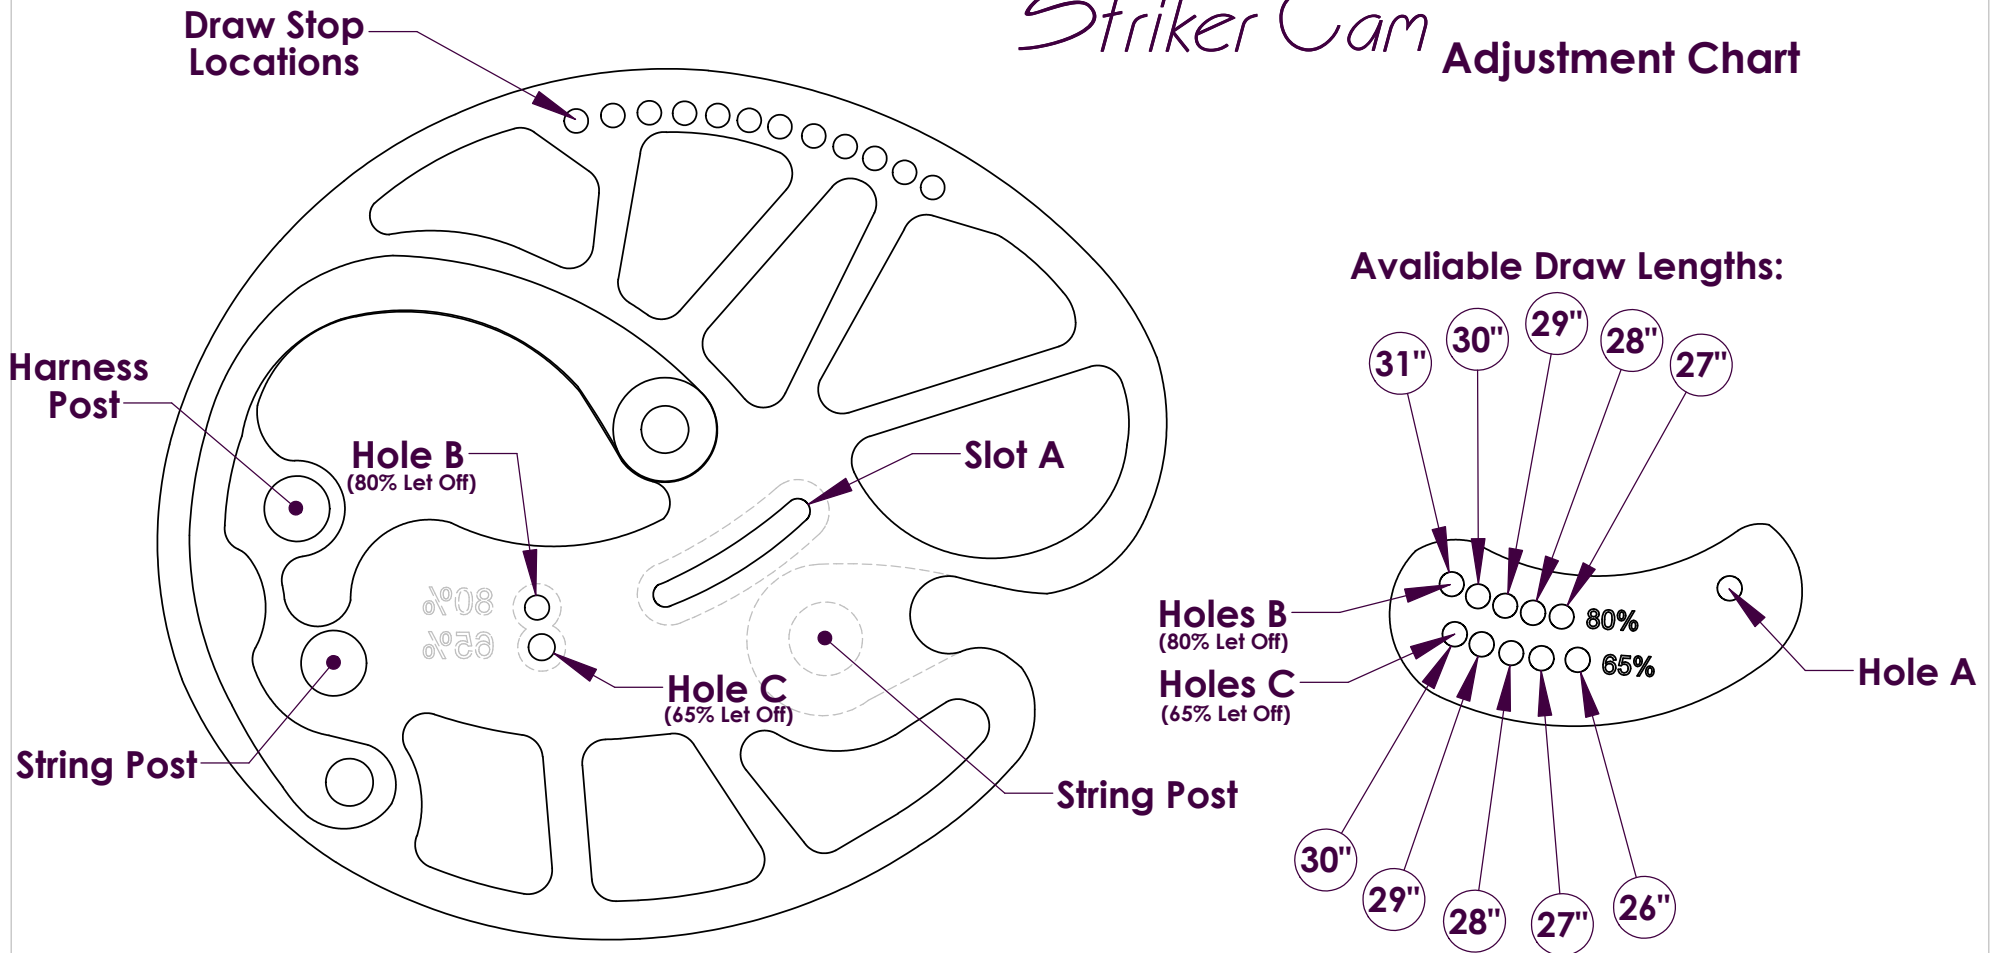

## Adjustment Instructions:

- 1.) To adjust draw length, loosen bolt in Slot "A", then remove bolt in Slot "B".
- 2.) Slide module to appropriate draw length hole.
- 3.) Re-install bolts and tighten.
- 4.) Move draw stop to fine tune draw length.

## Valley Adjustment:

To increase valley, move your draw length module one less hole than your desired length and leave draw stop position the same. This will increase valley.

## Example:

You are a 29" draw length and want to increase the amount of valley. Move module to the 28" draw length hole and leave your draw stop position the same.